

Manual



USER'S MANUAL

USER'S MANUAL OF AUTOMOBILE HEADREST DVD PLAYER

Accessories

Please check the following accessories after opening the package.

Remote controller



2 in 1

Native game disk



USER'S MANUAL



6 Sizes plastic poles adaptor

12,12.5,12.7,13.8,14,16mm
Installation adaptor poles



Power connection line



AV Cable



 
System connection and installation

 
Check whether the shape and installation size is suitable, please select and employ suitable accessories and tool in disassembling and assembling

USER'S MANUAL OF AUTOMOBILE HEADREST DVD PLAYER

The headrest pillow type DVD install method

Takes down the original installation head rest to select and match the steel pipe according to the original installation pole diameter for the head rest that having the DVD monitor, then the adjustment head rest steelpipe spacing, passed the power source and the audio frequency lines through the chair steel pipe, and connected on the power source, the sound and video frequency system with the vehicle. simultaneously the head rest will be fixed, and will freely to adjust the height, around size based on the front seat personnel request.

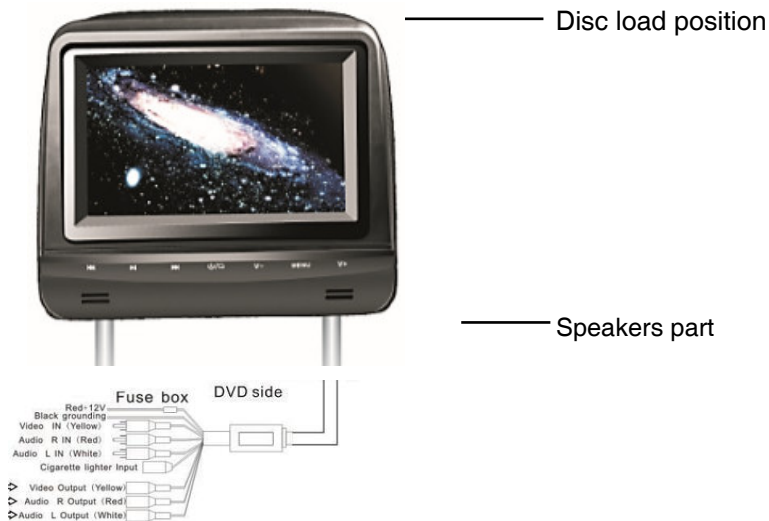

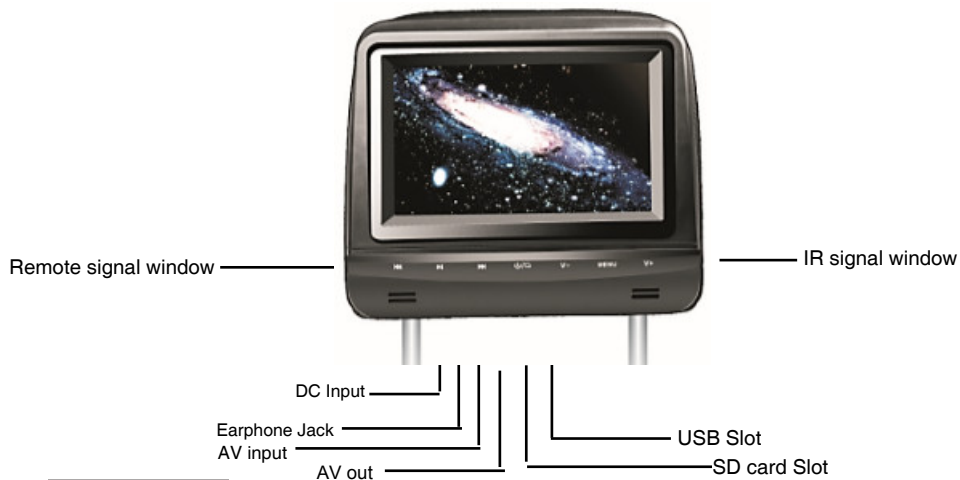

Remove disk

- (1) Press **▲** key to take out the disk
- (2) Put the disk back to the package bag or box for storage.

Caution:

- Be careful to take the disk, wrong operation shall damage the player;
- Do not damage the disk, or the player shall be damaged;
- Please keep the side with label upward if it's a single-side disk;
- Be careful in playing two-side DVD disk for the two sides of the disk are available for playing;
- Do not scratch the surface in taking the disk.

Batteries installation of the Remote control

1 Take the positions A and B by fingers (see the figure), press A per the arrowhead direction and then take out the battery holder.



2 Take out the used battery and load the new battery with anode upwards.



3 Place the battery holder back to its original position



(AAA Battery)

Cautions:

In order to prevent the battery leakage, if the remote controller shall be not used for long time (longer than one month), please take out the battery, if there is liquid flowing out, wipe away carefully and then reload the new battery.

Precautions for remote control

- For the first use, please first pull off the PVC sheet so as to electrify the remote control;
- Take notice to protect the remote control to avoid damaging;
- If there exists barrier between the player and the control, the remote controller might be out of use;
- Do not place the remote control under the strong light, or it might cause the unavailability of the device;
- Please operate the remote control in the effective distance.

 
Application of remote control

Application of remote control

- 1.Horizontal: $\pm 30^\circ$
- 2.vertical: $\pm 30^\circ$
- 3.Straight line: 5 meters


Caution:

The most functions could be operated by the remote controller and few functions only could be operated on the player.

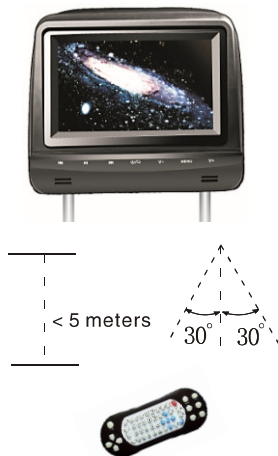

USER'S MANUAL OF AUTOMOBILE HEADREST DVD PLAYER

 Description for the pressing-keys of remote control

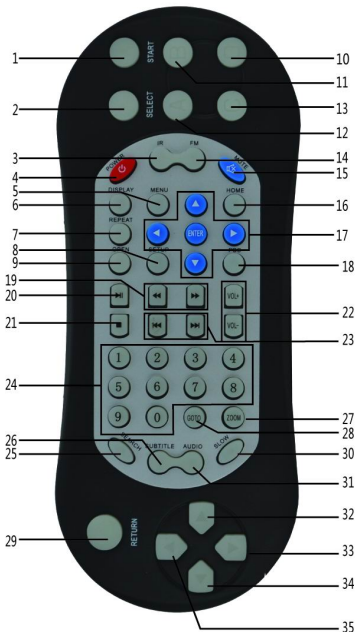

1	START	Load GAMES Disc then press this START key to start playing games.
2	MODE	Return to the Submenu
3	IR	Press this key to open the IR function by wireless headphone
4	POWER	Power for ON/OFF
5	TFT MENU	Menu for different functions: Brightness, contrast, IR etc.
6	DISPLAY	Display the disc information and playing time.
7	REPEAT	Press this button to return last chapter or Menu
8	SETUP	Open/close DVD setup menu
9	OPEN	Press this key to make the disc out
10	A	Games key for shoot and attack(available in some kinds of games only)
11	B	Games key for shoot and attack(available in some kinds of games only)
12	C	Games key for shoot and attack(available in some kinds of games only)
13	D	Games key for shoot and attack(available in some kinds of games only)
14	FM	Press this key to open the FM function by wireless FM transmitter
15	MUTE	Press MUTE to make the speakers off
16	HOME	Press this key to back to the home desk
17	DIRECTION KEY	Direction key for RIGHT/LEFT/UP/DOWN, TV Chanel selections.
18	PBC	Press this key back to the main playing desk home page
19	PREVIOUS/NEXT	Select to play the previous or next chapter
20	PLAY/PAUSE	Press this button to start or pause for playing
21	STOP	Stop to play
22	VOLUME +/-	Press this button to adjust the Volume higher or lower
23	FAST/BACK FORWARD	FAST OR BACK FORWARD BY 4.8, 16 +/-
24	NUMBER KEY	NUMBER KEY: To choose different chapters and songs by the serial No.
25	SEARCH	Press this key to search the TV channels available.(for the model with TV only)
26	SUBTITLE	Display the subtitles.
27	ZOOM	Zoom in/out, multiple modes
28	GOTO	Press this button goto desire numbered song and goto desire page in reading e-books.
29	RETURN	Back to previous chapter
30	SLOW	Playing slowly 1/2, 1/3, 1/4, 1/5, 1/6, 1/7, 1/8
31	AUDIO	AUDIO select for Left/RIGHT/STEREO
32	RIGHT	Games direction key for Right side
33	DOWN	Games direction key for down side
34	LEFT	Games direction key for Left side
35	UP	Games direction key for Up side

Basic Setup

Touch Setup key and the LCD will display the picture as figure 1, touch your desired function to setup, then the submenu will display also, set up it one by one, touch Back to exit the setup Menu.

Special Tips: for the company has many counterpart products, the figure is for reference only, all is subject the real product! The setup methods described in this instruction are for their common parts, other functions are recommended to use the default setup.

1. System (see figure 3)

Touch System to setup the Panel's calibration and Version touch Back to exit the setup Menu.

Figure 1

Figure 1

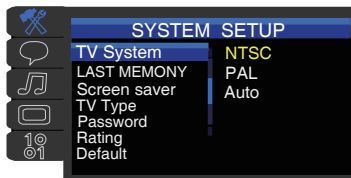 


Figure 2


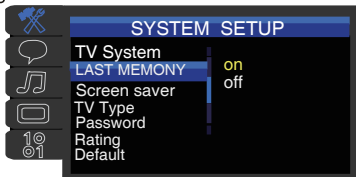 


Figure 3

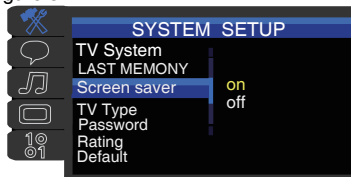 

2. **Disc** (see figure 4)

Figure 4


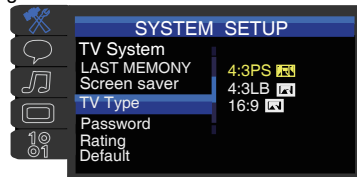 
- (1) Touch  key enter setup system, touch disc then screen will display the picture 3 to setup OSD language ,Audio Language, Subtitle Language , password and Rating
- (2) Touch your desired language option, multiple languages are available for selection including:English,Japanese, German,Spanish,French, Portuguese and RUSSIAN.
- (3) Touch Setup key enter the Setup system,select **PASSWORD** and press Enter key to confirm , then the screen will display the picture as figure4.

Figure 4



(4) **RATING**

When Play disc with locking function, it is can be according to the discs divided ranks and your practical needs to select the appropriate age for the level control.

Figure 5

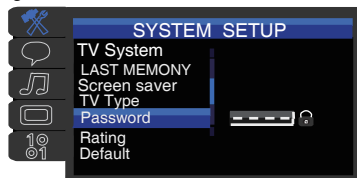 


Figure 6



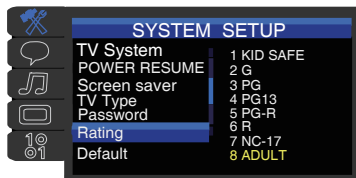 


Figure 7

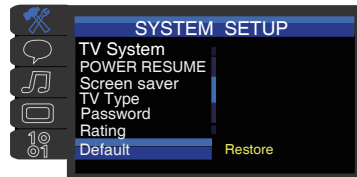 

AUDIO SETUP MENU

 Figure 12

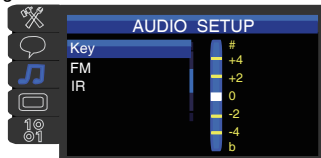

1. FM RF(see figure12)

when you want to transfer the Player's Voice to your CAR Amplifiers,make sure your car FM' s transmitter MHZ is exactly the same with the Players.

Figure 12


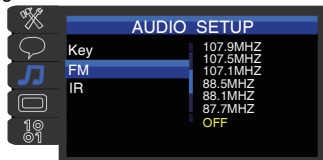 


Figure 13

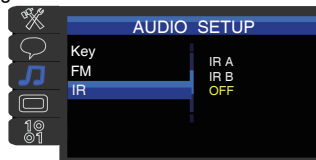 

Note: There are two IR channels, A & B. When using IR headphones, please make sure your IR headphone channel is exactly the same as your Player's IR channel. For example: When your IR headphone' Channel is A, your Player's IR channel should also be at position A.

There are 87.7,87.9,88.1,88.3,88.5,88.7,88.9,106.7,107.1,107.5MHZ FM channels in the player. When you want to transfer the Player's Voice to your CAR Amplifiers, make sure your car FM's transmitter MHZ is exactly the same with the Players. When opening the IR function, the IR Signal light will turn to red at the front of the DVD Player. and the speakers of the DVD will be stop work,speakers will be work again when you off IR and FM.

USER'S MANUAL OF AUTOMOBILE HEADREST DVD PLAYER

VIDEO SETUP

Use the VIDEO SET to set up the Brightness, contrast, and color BRIGHTNESS, CONTRAST, and color to your desired degrees.

Figure 14

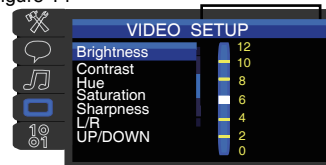 


Figure 15

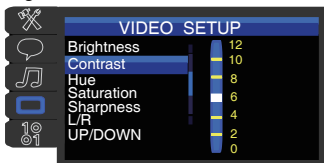 


Figure 16

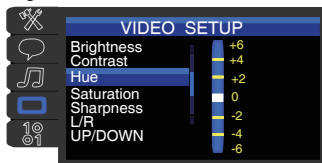 


Figure 17

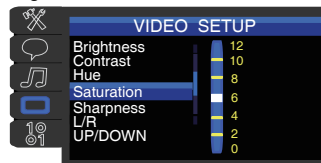 


Figure 18

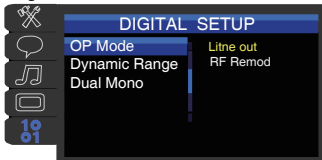 


Figure 19


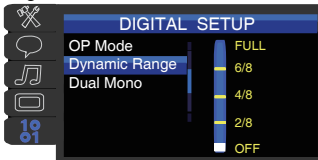 


Figure 20

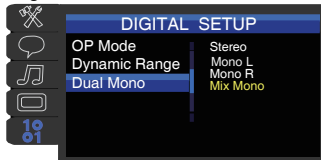 

Note: All setup option could exit the menu by pressing SETUP key. The system set up menu shall be a little different from the actual operation due to the software update; it shall be subject to the real product!

S. Technical specifications and parameters

Product Name	AUTOMOBILE NEADREST DVD PLAYER
Disk type (signal source)	MP3/ DVD/SVCD/VCD/DVCD/CD/CDG/WMA/JPEG CD-R/CD-RW (these two types of disk should be played by the above coding formats)
Display	7" TFT LED digital Touch panel (16:9)
Output Port	Audio: stereo Video: complex video signal output (AV) USB port (for spare) MS/MMC/SD CARD PORT (for spare)
Video System	PAL/NTSC/AUTO
Video Characteristics	Video Characteristics: 1.0Vp-p (75ohm)
Audio Characteristics	Frequency characteristics: 20-20KHZ (1dB) SNR: >90dB Total harmonic distortion: <0.01%
Power Voltage	DC: 12V/1.5A
Power Consumption	About: 12W
Working Temperature	-40 °C ~ +60 °C
Working Humidity	15~75% (No water drop is coagulated)
Net Weight	Approx. 2.2KGS
Dimensions	(L)235*(W)135*(H)195MM



Warning

- ▶ Read this manual before using this product.
- ▶ This product is composed of precision components and shall not be dissembled unless approved or authorized by us, otherwise we shall not provide any maintenance
- ▶ Protect the product from moisture and shock



MADE IN CHINA

