



Warning

- ▶ Read this manual before using this product.
- ▶ This product is composed of precision components and shall not be disassembled unless approved or authorized by us, otherwise we shall not provide any maintenance
- ▶ Protect the product from moisture and shock



AUTOMOBILE HEADREST MULTIMEDIA



USER MANUAL



Contents

Warning	1	3.TV type	6
Caution	1	4.Password	6
Before operating	1	5.Rating	6
Caring for your DVD discs	1	6.Default value	6
Trouble shooting	2	Language Setup	7
Accessories	2	1.Image display language	7
System connection	3	2.Audio/Subtitle/menu language	7
Installation	3	IR FM	7
The install method	4	VIDEO setup	8
Buttons of the unit	4	Digital setup	8
Key parts at the player	4	TFT MENU	8
Battery installation of remote control	4	Brightness/contrast	8
Basic oepations	5	Operation for game function	9
1.Power ON/OFF	5	Monitor User's manual	10
2.Load disk	5	Features	10
3.Remove disk	5	Product structure.....	11
4.USB and card reading	5	Structure	11
Menu operation	6	Connection method	11
TV System	6	TFT menu	12
1.LAST MEMONRY	6	Option/System/Clock	12
2.Screen saver	6	How to connect DVD player to the monitor	12

OPERATING INSTRUCTIONS FOR THE 7 INCH BRACKET DVD PLAYER

Please read the operating instructions carefully prior to use. Please keep the instructions manual, sales receipt and if possible the gift packaging for future reference.

WARNING

- For your safety and the safety of other road users, do not watch videos while driving.
- Any modifications to the product will void the guarantee

CAUTION

The product has dangerous high voltage inside. Non-professional personnel must not dismantle or conduct repairs. For repairs kindly return to the store or a qualified maintenance centre.

Do not clean the product with any corrosive chemical or detergent. The use of a soft cloth is recommended.

The operation voltage is DC 12V (± 2V). Higher or lower voltage could result in the product not working correctly or malfunctioning.

When in use the LCD screen may display bright spots. This is normal for active matrix display technology.

BEFORE OPERATING

- Before operating the product, please check the voltage of your automobile. It should be consistent with the working voltage of the product.
- Handle the power source firmly but with care. Do not force the power source in any way
- The laser is harmful to your eyes so do not dismantle the enclosure.
- Storage temperature should be: 30 to 75 degrees.
- Working temperature should be: 10 to 55 degrees.
- Clean the lens by use of a standard disc lens cleaner (not included). Ensure that it is damp-proof, crash-proof and pressure-proof.

Troubleshooting

TROUBLE SHOOTING	SOLUTION
No response	1. Check the power connection 2. Check the auto power is on 3. Check the power is opened
No sound	1. Check whether the volume is at the min. position or in mute mode 2. IR mode. Please select the FM/IR if this is off 3. No sound output in the following modes: PAUSE/FAST FORWARD/REVERSE/STOP 4. Resume default via the setup system
Image	1. Check whether the player is in line with the input mode. Press DVD/AV to switch to DVD mode 2. Check whether the brightness setup is appropriate.
The Disc will not read	1. Check whether the disc has been loaded and the side with the label is placed upward 2. The disc is damaged or dirty. Please load another disc or clean the disc 3. The region codes of disc and player are different 4. The disc format is wrong
Incorrect image size	1. Setup the TV screen once again 2. Select the corresponding screen format from the setup menu
The track could not be selected	1. Some sections of some discs cannot interrupt the set playing order
The remote control refuses to work	1. Check whether there are any barriers between the remote control and player 2. The remote control doesn't aim at the receiving head of player 3. Check whether the battery is installed correctly 4. Check whether the battery is sufficiently powered

ACCESSORIES

Please check that all the accessories below are included in the packaging, upon opening.

If not return to the store for replacement




SYSTEM CONNECTION AND INSTALLATION

Check carefully whether the shape and installation size is suitable. Please select and use suitable accessories and tools when disassembling and assembling.

INSTALLATION

- Select the correct size installation pole that matches your fitted headrest
- Feed the power cable and audio lines through the automobile seats existing pipes
- Connect the power source (either the fitted cigarette lighter or car battery connector) to the sound and video system in the vehicle.
- The headrest will be fixed and can be adjusted freely to the desired height

Power cable connection method

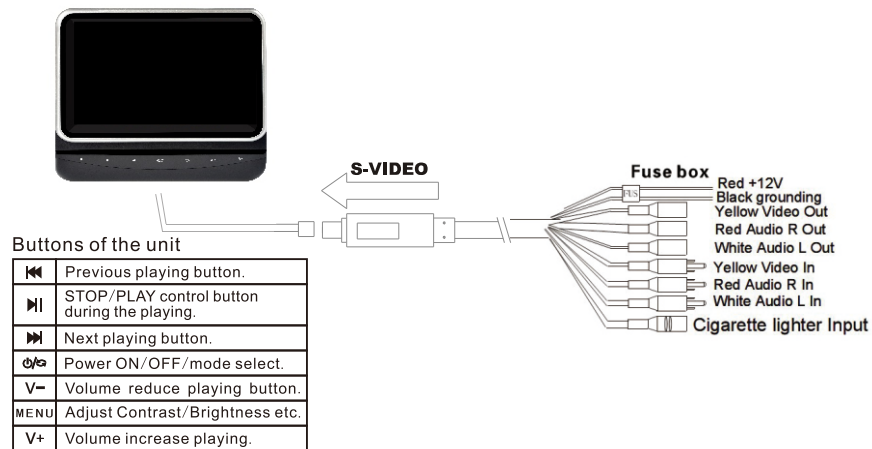

Key parts at the DVD Player



Notice: Please carefully turns on the display monitor when vehicles start, please to close the display monitor after puts well the small dish as soon as possible, in order to avoid damages to the display monitor.

Battery installation of the remote control

- 1 Take the Remote control out, to open the battery cover to insert the one pair of AAA type battery
- 2 Take out the used battery and load the new battery with anode upwards.



Caution:

In order to prevent the battery leakage, if the remote control shall be not used for long time (longer than one month), please take out the battery, if there is liquid flowing out, wipe away carefully and then reload the new battery.

Basic operations

1. Power ON/OFF

- (1) Press the Power key and the indicator shall be turned on ,after the screen appearance the player will begin read the disk ,if no disk inside ,the LCD will appear "No Disk".
- (2) In Power ON state, further press Power key to power off the player and the indicator shall be turned on.

2. Load disk

- (1) Press Eject key to open the disk door;
- (2) Load the disk (with the label side upwards).
- (3) Close the disk door.
- (4) The player shall play the disk automatically.

3. Remove disk

- (1) Press Stop key to stop playing;
- (2) Press Eject key to eject the door;
- (3) Take out the disk;
- (4) Put the disk back to the package bag or box for storage.

Caution:

- Be careful to take the disk, wrong operation shall damage the player;
- Do not damage the disk, or the player shall be damaged;
- Please keep the side with label upward if it's a single-side disk;
- Be careful in playing two-side DVD disk for the two sides of the disk are available for playing;
- Do not scratch the surface in taking the disk.

4. USB and card reading

- (1) The external USB memorizer (USB disk) might be connected by the attached USB connection line. In the state of Power OFF and no disk is loaded inside, connect the external memorizer to the corresponding USB port, and then press Power key to power on the player, the device shall detect the signal source automatically (including video, audio and image), and the player shall play automatically if the signal source format that complies with the player, is detected.
- (2) In the state of Power OFF and no disk is loaded inside, connect the external memorizing card (MS/SD/MMC card) to the corresponding port, and then press Power key to power on the player, the device shall detect the signal source automatically (including video, audio and image), and the player shall play in order automatically if the signal source format that complies with the player, is detected.
- (3) The contents of Mp3, WMA, Mp4 and JPEG formats could be downloaded from the internet through PC and be saved in the USB disk or external memorizing card to play.

Caution:

- Do not pull off the external memorizer when the player is connected with power, otherwise the external memorizer or the player shall be damaged;
- Individual MP3 player couldn't play through USB device.

Menu operation (Remote Control)

Press Setup key and the LCD will display the picture as figure 1, press [▲] and [▼] key to move the white bar to the designated position, press Enter to confirm to display its submenu, or press [▶] key to enter its submenu directly.








Note: no matter in which state, press "▲"/"▼"/"◀" and "▶" key to move the white bar and press Enter key to make it available, press [◀] key to exit the submenu at the right of LCD and at any time press Setup key to exit the Setup system.

Special Tips: for the company has many counterpart products, the figure is for reference only, all is subject the real product! The setup methods described in this instruction are for their common parts, other functions are recommended to use the default setup.

TVsystem(see figure 1)

- (1) Press Setup key enter the setupsystem,select TV system and press Enter key to confirm,then the screen will display the picture as figure1.
- (2) Enter the submenu,if you want to set the system to be PAL,select P AL and press Enter key to confirm, then press Setup key to exit the setup system.

Note:the video Input system of TV set should be same with the video output system of DVD player.

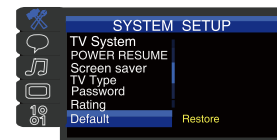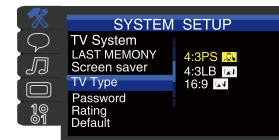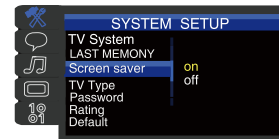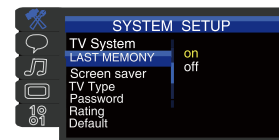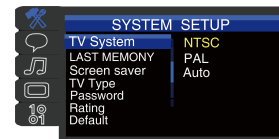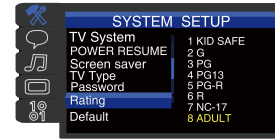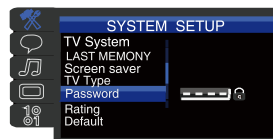

Language Setup

1. Image Display Language (see figure 8)


(1) Press Setup key and the TV screen will display the system setup picture, select Language Setup and then select Image Display Language option, press Enter key to confirm the TV screen shall display the image as figure 8.

(2) Select your desired language option, multiple languages are available for selection including: English, Japanese, German, Spanish, French and Portuguese. Select enter key to confirm and then press setup key to exit the menu setup




AUDIO SETUP


AUDIO SETUP MENU

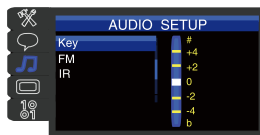

FM IR

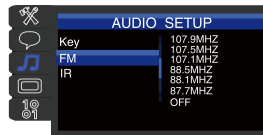

IR

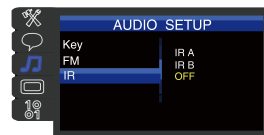




when you want to transfer the Player's Voice to your CAR Amplifiers, make sure your car FM's transmitter MHz is exactly the same with the Players.

Note: There are two channels, A & B. When using IR headphones, please make sure your IR headphones are exactly the same as your Players IR channel. For example: When your IR headphones channel is A, your Players IR channel should also be set to A.

There are 87.7, 87.9, 88.1, 88.3, 88.5, 88.7, 88.9, 106.7, 107.1, 107.5 MHz FM channels in the player. When you want to transfer the Player's Voice to your CAR Amplifiers, make sure your car FM transmitter MHz is exactly the same with the Players. When opening the IR function, the IR signal light will turn red at the front of the DVD Player, and the speakers of the DVD will stop working, speakers will work again when you turn off IR and FM.

VIDEO SETUP

Use the VIDEO SET to set up the Brightness, contrast, and color BRIGHTNESS, CONTRAST, and color to your desired degrees.

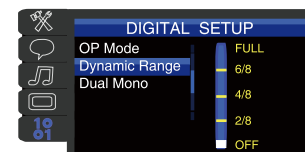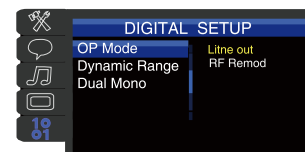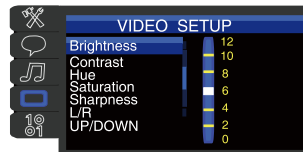

TFT MENU

Press Menu key on the product one time to adjust the

BRIGHTNESS, CONTRAST, SATURATION, LANGUAGE, AUDIO CONTROL, IR, MODE, RESET and EXIT.

(1) Press the menu key and the TV screen will display the system setup image like Figure 19, 20 and 21 select BRIGHTNESS, CONTRAST, SATURATION etc one by one to setup what you desired.

(2) If the user wants to setup the image brightness, press (+) Key to increase the brightness and press (-) key to decrease the brightness.

Note: the setup methods of CONTRAST, SATURATION are same with the setup of BRIGHTNESS.

Press the MENU KEY on the product second time to control the volume system (IR FM) as the picture 20

Press the MENU KEY on the product third time to enter the OPTION System for the Zoom function as the picture 21.

PANEL SETTING	
BRIGHTNESS	10
CONTRAST	10
SATURATION	10
HUE	10
RATIO	10
DEFAULT	16:9

Operation for Game Function

The player features superior intelligent game function, it will make you enjoy the wonderful game in spare time.



2 in 1 Remote Control

Operation for game function

2. Description for playing the Game Disk Operation

- (1) Press Eject key and load the game disk (the Disk for free), the game main menu shall be displayed in seconds
- (2) Press direction key of the function controller or game controller to select the games then press ENTER on the function controller or press START on the game controller to enter the game.

3. Description for the Wireless Game Controller

- (1) Press SELECT to enter the menu of the built-in games.
- (2) Press direction key to select the games you like, then press the START to enter the game.
- (3) Enter the game, press the direction key to select upward/downward/leftward/rightward, A and B key to operate the functions.
- (4) Press Stop/Return key on the function controller or press RESET key on the game controller to exit the game. If enter EMBEDDED Game, press Stop/Return key or press RESET key can return to the main menu. then use direction key select EXIT and press ENTER on the function controller or START on game controller to exit the game.

Caution:

For different games, the function keys might be different, the user could get the know-how by trying several times


AUTOMOBILE HEADREST MONITOR USER MANUAL

The car cinema, wireless game controller, unlimited entertainment, perfectly enjoyment

Features :

- 7" (16:9) TFT LCD display
- Brightness: 250cd/M2
- LED backlit panels for exceptional picture quality, high efficiency and long life
- Automatically selects PAL/ATSC/ATSC MH system
- Built-in front 3.5mm AV input jack
- 2 A/V inputs
- One wired RCA input
- Built in dual Channel speakers (optional)
- Built in IR transmitter (optional)
- Wireless remote control
- Power supply: DC +12V (10.6V-15.8V)
- Power consum : 12W
- Operating temperature:-10 degrees to +60 degrees.

Structure

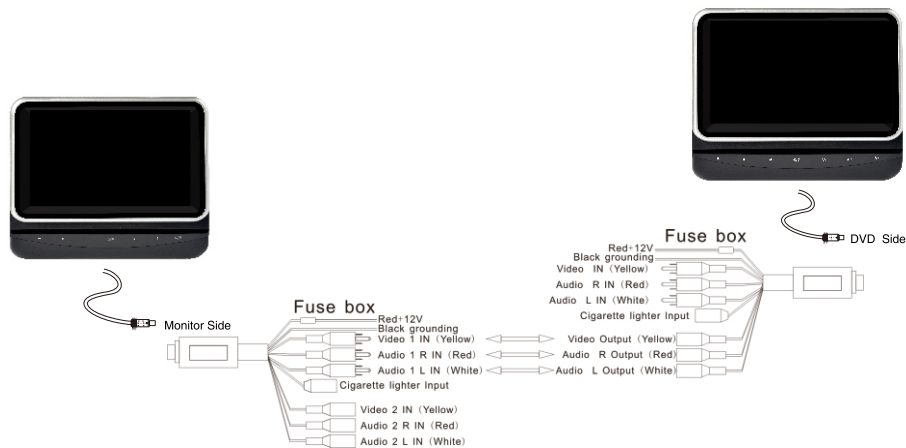

Buttons of the unit

-	Volume down.	↓	Direction choose key for down.
☐	Menu	↑	Direction choose key for up.
+	Volume up.	⏸	Mute
⏻	Power ON/OFF/mode select.		

TFT MENU

Press the TFT Menu key on the Remote control to enter the MONITOR MENU, to adjust the PICTURE and VOLUME

Press the TFT MENU and the screen will display the Picture setup image, select picture setup option and press ▲ / ▼ then select Brightness, contrast, and colour press ◀ and ▶ to increase or reduce the BRIGHTNESS, CONTRAST, and COLOUR.

IR

press TFT MENU twice and the screen will display the VOLUME setup image , press ▲ / ▼ to select Volume, IR setup. Press ◀ and ▶ to increase or reduce Volume, and OPEN or turn OFF the IR function

Note:

When the IR function is turned on, the IR Signal light will be red on the front of the display
The speakers of the unit will be without Volume when IR open, turn off IR, the speakers will have volume again.



OPTION/SYSTEM/CLOCK setupin MENU

